

## Operating instructions

Remote sensor  
Order no. 1493 00



Table of Contents

1	Safety instructions.....	3
2	Intended use .....	3
3	Mounting and electrical connection.....	3
4	Technical data.....	3

## 1 Safety instructions



Electrical devices may only be mounted and connected by electrically skilled persons.

Danger of electric shock. Depending on the room temperature controller, the sensor cable is connected to the mains voltage potential. If the sensor cable is damaged, disconnect the device immediately and replace the sensor cable.

Serious injuries, fire or property damage possible. Please read and follow manual fully.

## 2 Intended use

- External sensor for measuring ambient temperature
- Connection to a suitable room temperature controller

## 3 Mounting and electrical connection



### **DANGER!**

Mortal danger of electric shock.

Before working on the device or performing an installation, disconnect all the corresponding circuit breakers. Cover up live parts!

The remote sensor must be mounted in an empty tube so that the sensor is mechanically protected and can be exchanged if necessary.

## 4 Technical data

Dimensions Ø×H	7.8 × 27 mm
Sensor cable	S03VV-F 2 x 0.5 mm <sup>2</sup>
Length connecting cable	4 m
Degree of protection	IP 67

### Remote sensor resistance values

Temperature (°C)	Resistance (kΩ)		Temperature (°C)	Resistance (kΩ)
5	89.5		30	26.2
10	68.8		35	20.9
15	53.5		40	16.7
20	41.9		45	13.5
25	33.0		50	11.0

The resistance values can only be measured if the sensor is disconnected.

**Gira**  
**Giersiepen GmbH & Co. KG**  
Elektro-Installations-  
Systeme

Industriegebiet Mermbach  
Dahlienstraße  
42477 Radevormwald

Postfach 12 20  
42461 Radevormwald

Deutschland

Tel +49(0)21 95 - 602-0  
Fax +49(0)21 95 - 602-191

[www.gira.de](http://www.gira.de)  
[info@gira.de](mailto:info@gira.de)